



Delanteras

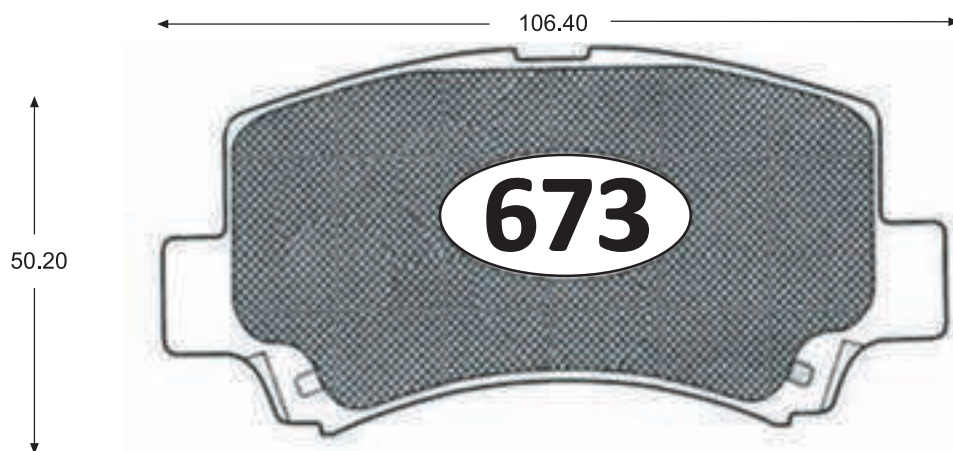


CM 10 1300	Del. 12 →	CMS 1300	Del. 11 →		
CHANGAN P.UP S100	Del. 08 → 12	CHANGAN P.UP S200	Del. 08 → 12	CHANGAN FURGON S300	Del. 08 → 12

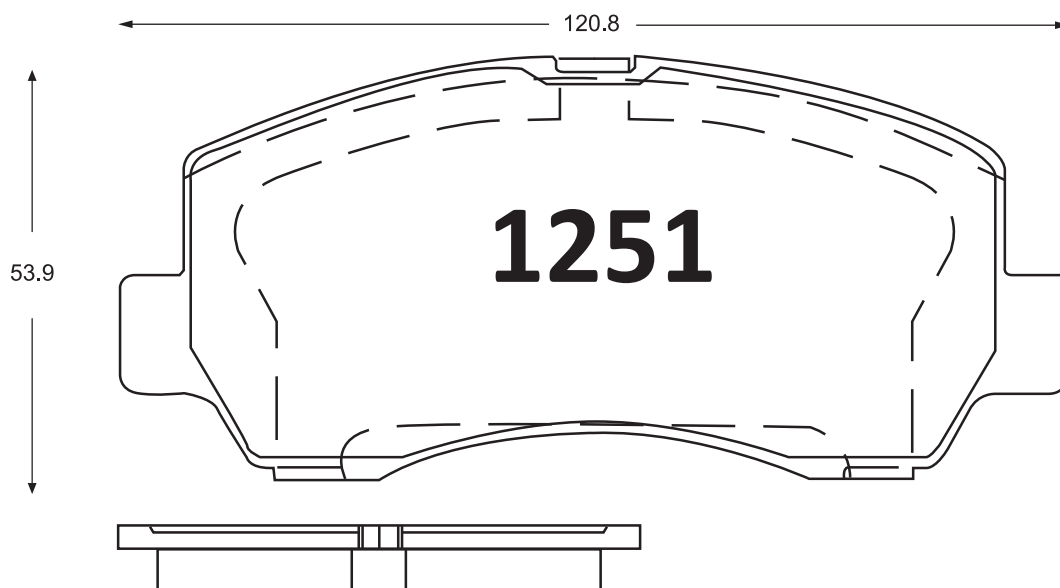


ESPESOR: 15 mm

CHANGAN S100 Del. 12 →

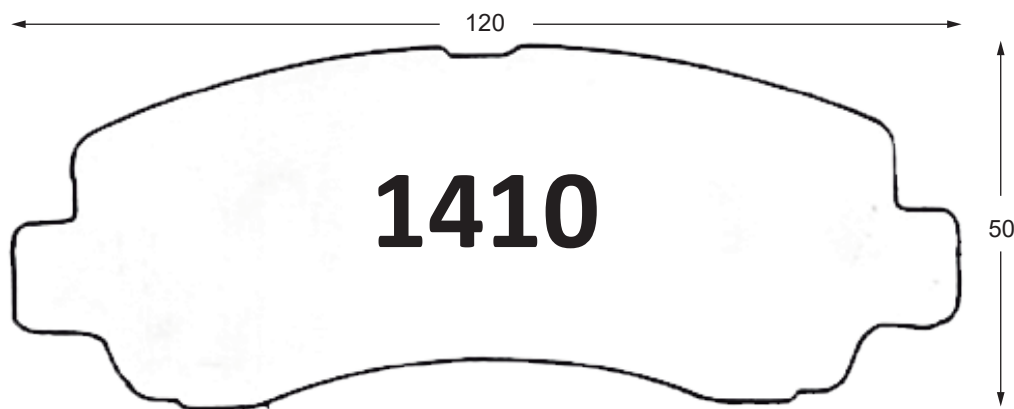


CHANGAN CARGO BOX 1.2 Del. 15 →

Delanteras

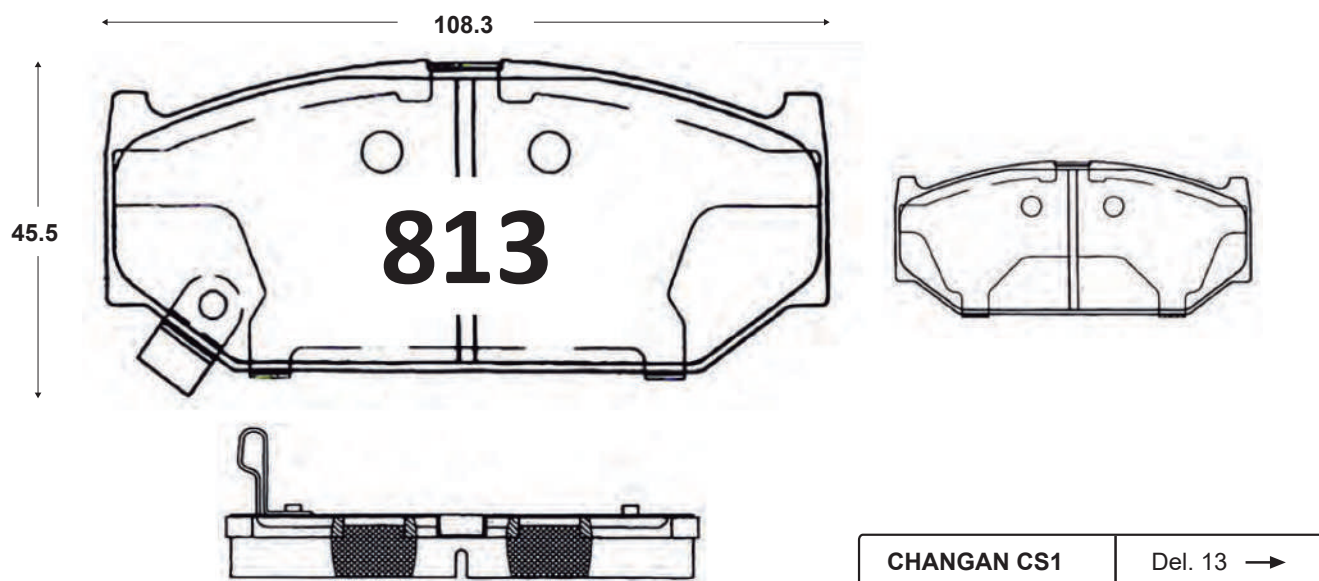



ESPEJOR: 14.9 mm

CHANGAN BENNY 1.3 SE	Del. 10 →
-----------------------------	-----------

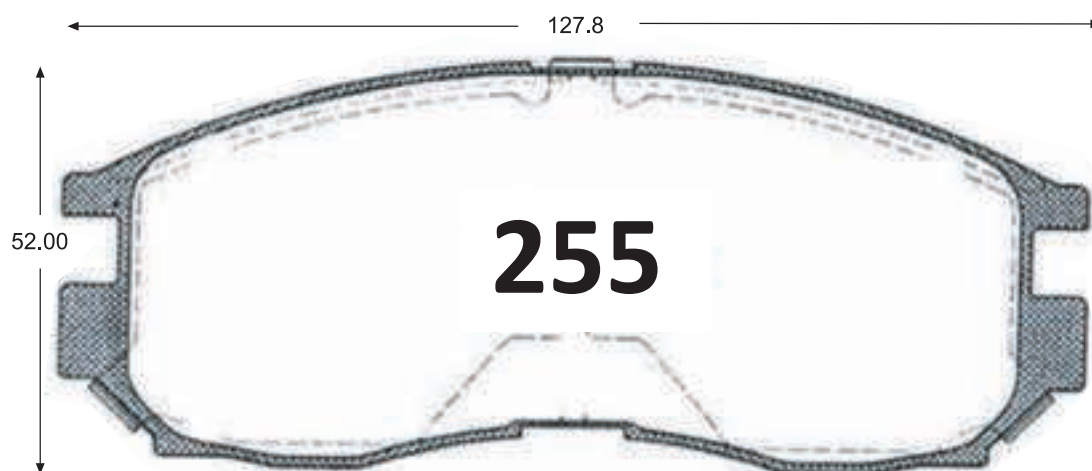

CHANGAN CV2 1.5	Del. 12 →
------------------------	-----------

Delanteras

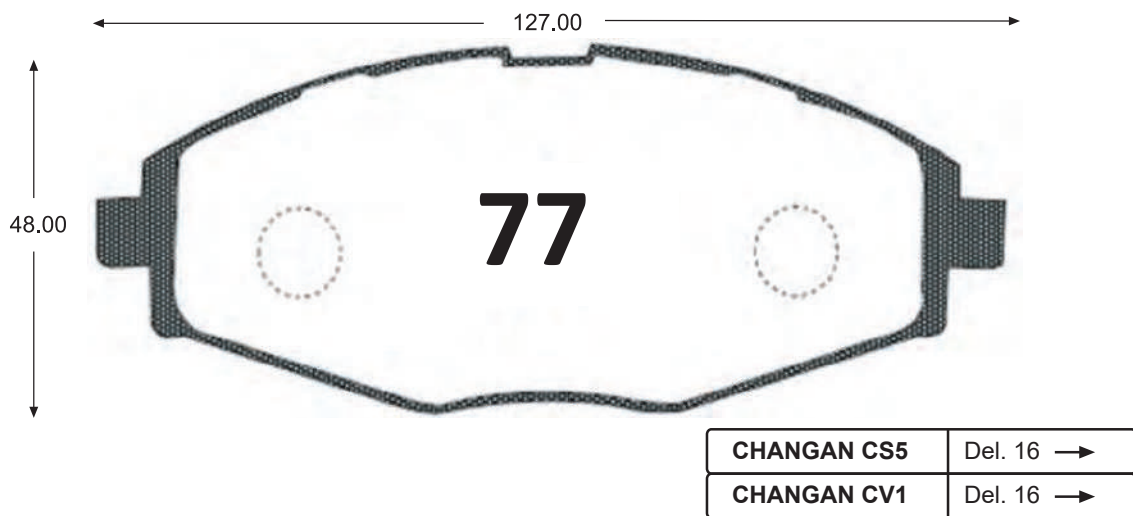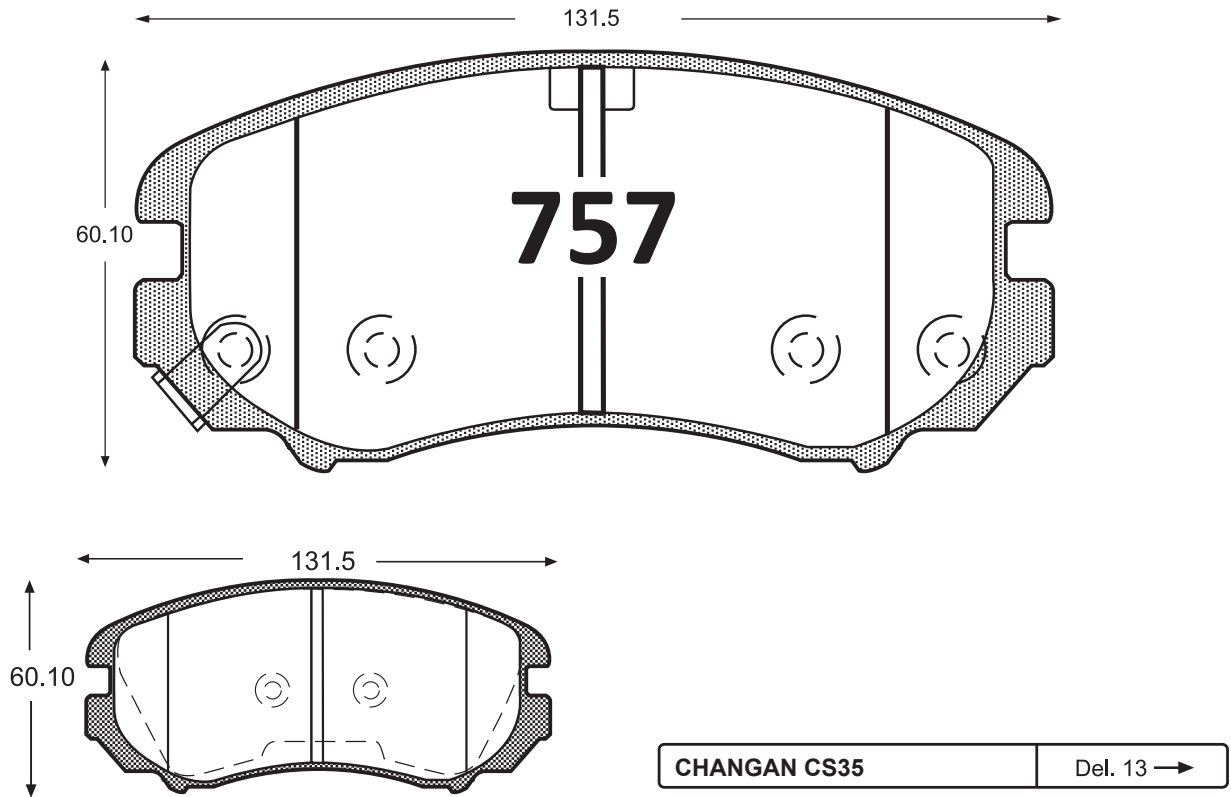

Traseras

